



Katun PN 47284 and 47285 Chips
Mounting instructions for DR512 drum units with metal rivet

Updated Chip Style

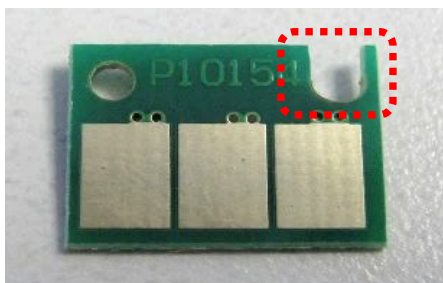

1. Remove old chip board by prying upward underneath the chip board with a small flat blade screwdriver until the chip board breaks free from the metal rivet and drum unit.

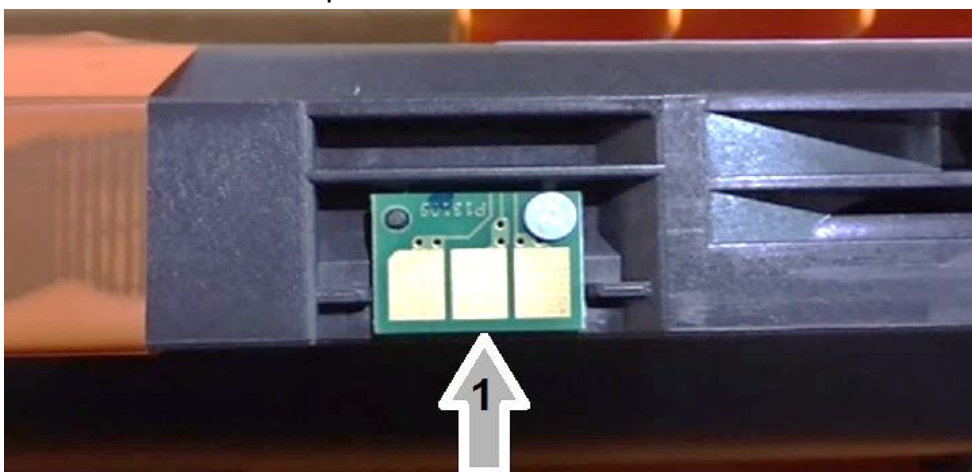

2. Remove and clean any chip board residue from around the metal rivet.
3. Install the new chip as shown in the photo by first positioning the chip board hole on the plastic pin (1) and then sliding the chip board slot under the metal rivet (2). A small amount of pressure may have to be applied to properly position the new chip.

